

PK090388 Wheel Extension Kit Installation Guide

*The chipper must be lifted off of the ground before removing the existing axel and attaching the PK090388.

*We recommend using a floor jack and 2x4 to lift along the base of the unit. This requires someone to help hold the unit steady as it is being lifted.

*Once the unit is lifted a few inches off the ground, use 2 jack stands on the frame to hold the chipper in place.

*Remove the tires from the original axel and then remove the axel itself.


*Line up the PK090388 with the corresponding holes as shown in the photo below:



Note: The PK090388 will attach along the outside of the frame.

*There will be a slight outward angle. The engine will still be leveled.

*Put in the bolts and then add the washer, lock washer, and nut on the inside portion of the frame.

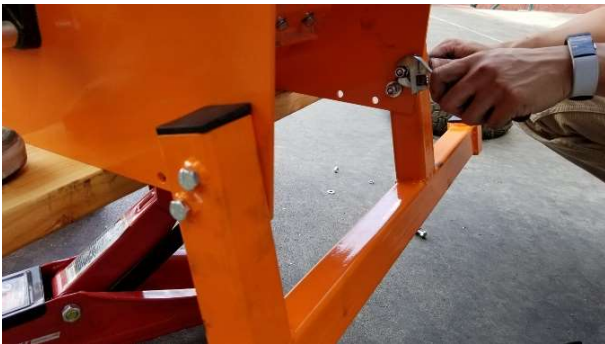

Note: Make sure all nuts and bolts are tightened down securely

*Attach the existing wheels in reverse fashion. Wheel -> Washer -> Nut -> Cotter Pin.

